



# Operating Manual

**Model 976EX**  
**Long Range DC Bar**




# Contents

Introduction	3
Certification	4
Unpacking and Inspection	4
Installation	5
Maintenance	8
Technical and Construction	10
CE Approval	10
Repairs And Warranty	11
Fault Finding	12
Special Conditions for Safe Use	15

Products shown in this document may be covered by one or more patents, patents applied for and/or registered designs and/or trade marks. For further information please refer to our Head Office or visit [www.meech.com](http://www.meech.com).



# Introduction

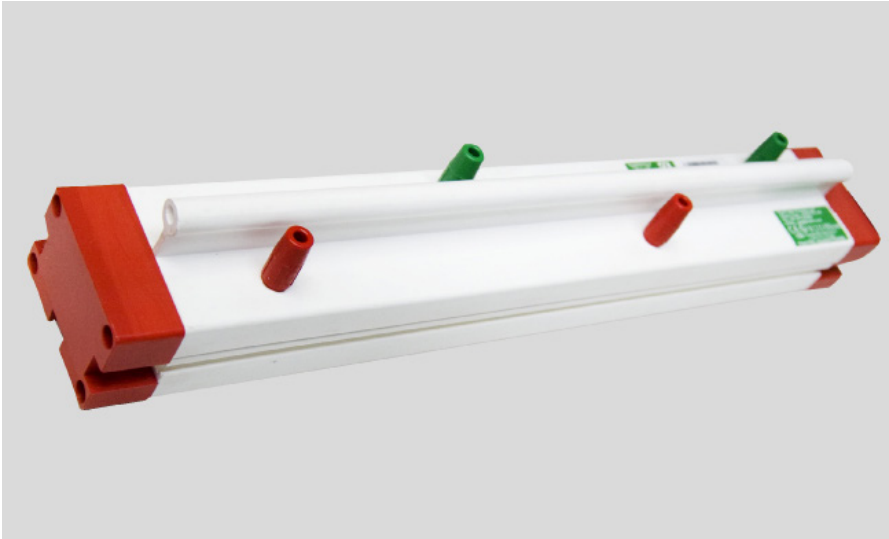

The Meech Model 976EX has been designed to provide highly effective long range ionisation using Pulsed DC Technology.

The 976EX Bar provides ionisation through alternating positive and negative emitter pins mounted in a profiled extrusion. The emitter pins are resistively coupled to the high voltage pulsed DC source, rendering the emitters shockless to touch. The emitter pins are removable to enable cleaning or replacement.

The extruded profile has been designed to enhance emitter life and allow easy cleaning while giving linear strength. The profile incorporates “T” slots on three faces to provide universal mounting points. The Meech Model 976Ex is powered the Meech Pulsed DC Controller.

# Certification

This Model 976EX has been certified by underwriters laboratories Inc for  
CLASS 1, DIVISION 2, GROUP D HAZARDOUS LOCATIONS

## Meech Static Eliminators Ltd

Witney, Oxon, OX29 OYN, UK

Tel: +44 1993 706700; Fax: +44 1993 776977

e-mail: sales@meech.com; web: www.meech.com

  II 2 GD EEx m

1180 Gas group IIB, temp Class T6 (T85°C)

T amb -20 to +35°C. IP65

Model: 976Ex

Baseefa: 04ATEX0348X

# Unpacking And Inspection

Your Model 976EX Bar was carefully packed at the factory in a container designed to protect it from accidental damage. Nevertheless, we recommend careful examination of the carton and contents for any damage. If damage is evident, do not destroy the carton or packing material and immediately notify the carrier of a possible damage claim. Shipping claims must be made by the consignee to the delivering carrier.

# Installation

The Model 976EX Bar should be located in the most convenient position so that the pins of the Bar are directed towards the target area. The bar should be positioned to give an unrestricted path for the ions to travel to the target area. It should typically be between 300mm and 600mm away from the target area.

The bar must be mounted using the brackets provided. The bracket should be positioned on a maximum 500mm pitch. The M6 bolts must be used to secure the 976EX bar to the machine frame.

The Meech Model 976EX must be connected to the Meech Model 977v3 ( UL Listed) which must be located outside of any EX zoned area.

The Model 976EX connects to the 977v3 by plugging the male plugs, found at the end of the Bar cabling, directly into the high voltage sockets of the controller. The plugs and sockets are marked with “+” positive and “-” negative indicators for correct connection to the power supply.



**POWER, INPUT AND OUTPUT (I/O) WIRING MUST BE IN ACCORDANCE WITH CLASS 1, DIVISION 2 WIRING METHODS ARTICLE 501.10(b) OF THE NATIONAL ELECTRICAL CODE , NFPA 70.**

A) THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS 1, DIVISION 2, GROUP D OR NON HAZARDOUS LOCATIONS ONLY

B) WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS 1, DIVISION 2

C) WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.

Connect the mains supply to the Pulsed DC Controller and switch ON. The 976EX Bar will now produce Pulsed DC ionisation from the emitters of the Bar.

The shockless emitter pins produce ions of positive and negative polarity. These, because of the product's unique design, propel themselves away from the emitter points towards the target area.

Optimum static elimination can be achieved by adjustment of the "Rate" (frequency of pulsing) and the "Balance" ( proportion of positive to negative ions generated) on the Controller.





If the bar is positioned a long distance from the target area ( 600mm-750mm) the Rate should be set to the lowest setting. If the bar is positioned close to the target area (150mm -300mm) the rate should be set towards its maximum.

If the polarity of the static charge to be removed is known the Balance can be adjusted to give a faster decay speed.

I.E. a) If the static charge is known to be positive the balance should be adjusted towards negative on the Controller.

- b) If the static charge is known to be negative the balance should be adjusted towards positive on the Controller.



# Maintenance

## Cleaning your Meech Ioniser

Ionisers require periodic cleaning. During normal operation, dirt will build-up on the emitter pins and upon the body of the ioniser. This will cause a reduction in performance.

Typically, weekly cleaning is sufficient. However, equipment used in some heavy contamination areas, such as gravure printing or where plastic fumes are present, may require daily cleaning. Equally, in a Class 100 area, cleaning may only be required on a monthly basis. Advanced systems with performance monitoring, e.g 977cm and 904cm, will alert the operator to the need to clean the equipment before performance drops to an unacceptable level.

Before cleaning, ensure that the equipment is switched off.



Emitter pins can be cleaned very effectively with a brush. A dry toothbrush is ideal.



Ionisers will need periodic wiping to clean grey deposits from the surface of the bar. A cloth moistened with a small amount of IPA or methylated spirits is recommended.



# Technical and Construction

Output voltage	:	Up to 8kV D.C.
Operating current	:	Less than 0.25 micro amps.
Max temperature	:	35°C.
Min temperature	:	-20°C.
Weight	:	50g per 300 mm
Cable	:	5 metres as standard
Dimensions	:	50mm x 50mm x length required.(Max 4000mm)
Construction	:	FR ABS extrusion
Emitters	:	Titanium (replaceable)
Mounting	:	Universal via “T” slots fitted with 2 x M4 x 20mm studs as standard. “T” slots are located on three sides of the bar to allow mounting flexibility.

# CE Approval

An EC Declaration of Conformity for this product exists in respect of the Low Voltage Directive: 72/23/EEC (“LVD”) & Electromagnetic Compatibility Directive: 89/336/EEC (“EMCD”)

Health and Safety Emission of Ozone: Considerably below international standard of 0.1 ppm.



## Repairs And Warranty

The Meech 976Ex Bar is warranted by Meech Static Eliminators Ltd. to the original purchaser against defects in material and workmanship for one year after purchase. Should any malfunction occur, please return the bar directly to Meech Static Eliminators or your local Meech Distributor. All products returned to the factory MUST be accompanied by a return authorisation number and must be shipped prepaid. For prompt service, ship the unit to the factory with the return authorisation number shown clearly on the label. Be sure that it is well packed in a sturdy carton with shock absorbing material.

Include a note stating the nature of the problem as specifically as possible, and also include instructions for returning the bar to you. We will pay one-way return shipping costs on any repairs covered under the warranty.

Field repairs should not be undertaken during the warranty period. Repair attempts by unqualified personnel will invalidate the warranty.

# Fault Finding

Must only be carried out when the product is in a safe ( non-hazardous) area.

Tests must be completed by a qualified electrical engineer.

If in doubt contact Meech head office or your local distributor.

**CAUTION:** Whilst no danger to personnel exists, it is essential that any high voltage ionising equipment, (exception Meech Model 910 Water Resistant Ionising Bars), makes no contact with water or water based fluids.

Should such an event occur, disconnect immediately and return equipment to the manufacturer for water damage assessment.

To verify where a fault may have occurred it is important to test each item of the system individually. Should more than one bar be connected to a power supply, each must be tested individually.

To check the Pulsed DC system follow the procedure detailed below:

1. Switch off the electrical supply to the system.



2. Disconnect all bars from the controller.



3. Reconnect the supply and switch on the unit.



- Using a high voltage probe ( RS type 610 281 ) and meter ( RS type 610 950 ) measure the voltage on each of the output sockets. The reading should be at minimum power 4kV and at maximum power 8 kV



- Having checked the power supply, reconnect one Model 976 Bar.

- Using a high voltage probe (RS 610 281) and meter (RS 610 590) measure the voltage on the pins of the bar. This voltage should be between 3 and 6kV.



- If there is more than one bar to test, disconnect the first item and repeat the above steps.



# Special Conditions for Safe Use

1. The 976Ex eliminator bar shall be used in conjunction with either Meech Type 977v3 or Type 977HL power supplies.
2. The power supply must be protected by a fuse capable of withstanding a prospective short circuit current of 4000A
3. The bar shall be installed according to the manufacturer's installation instructions for model 976Ex.
4. The bar is suitable for installation only in areas where there is a low risk of impact damage.
5. The plastic conduit must be securely clamped within 100mm of the bar.
6. The user must determine, in consultation with Meech, the suitability of the apparatus for use with particular solvents.
7. When used in dust environments, the equipment may not be used in association with dusts having an electrical resistance equal to or less than  $10^3 \Omega.m$ .
8. When used in dust environments, the equipment may be used only with dusts requiring an ignition energy of greater than 0.06mJ.







#### **Meech International (UK)**

2 Network Point  
Range Road, Witney  
OX29 0YN, UK

Tel: +44 (0)1993 706700  
Fax: +44 (0)1993 776977  
email: sales@meech.com

#### **Meech CE**

2151 Fót  
Széchenyi út. 46  
Hungary

Tel: +36 27535075  
Fax: +36 27535076  
email: ce@meech.com

#### **Meech Static Eliminators USA Inc**

2915 Newpark Drive  
Norton, OH 44203  
USA

Tel: +1 330 564 2000 / 1 800 232 4210  
Fax: +1 330 564 2005  
email: info@meech.com

#### **Meech Static Eliminators (Shanghai) Co. Ltd**

Room 205, Huana Hotel Office Tower  
No. 1733 Lianhua Road  
Shanghai 201103  
China

Tel: +86 400 820 0102  
Fax: +86 400 820 0102\*201  
email: china@meech.com

#### **Meech Elektrostatik SA**

Kaiserbaracke 66  
B-4780 St.Vith  
Belgium

Tel: +32 8086 2983  
Fax: +32 8086 2821  
email: mesa@meech.com

#### **Meech Shavotech**

Shavo House, Survey No.21A / 10 B, Plot No.394  
South Main Road, Koregaon Park,  
PUNE 411 001  
India

Tel: 020-26069641/ 26069642,  
Fax: 020-26069644  
e-mail: india@meech.com